

INSTRUCTION UNIVERSAL SERVICE KIT U1

COMPONENTS



VALVE CORE



VALVE NUT



VALVE CAP




LARGE GREY SEAL



METAL WASHER




SMALL BLACK SEAL

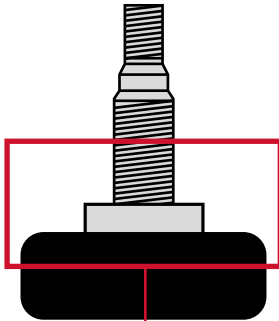


START HERE:

Once the sensor has been removed from the wheel, the spare parts required for maintenance should be identified properly.


LARGE GREY WASHER ON NON-REMOVABLE METAL BASE

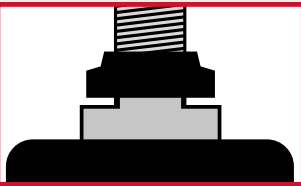


SMALL BLACK WASHER ON REMOVABLE METAL WASHER

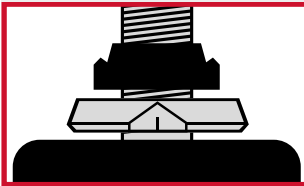

SMALL BLACK WASHER ON NON-REMOVABLE METAL BASE

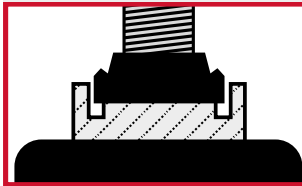

SMALL BLACK WASHER ON THE INSIDE OF THE REMOVABLE AND REUSABLE METAL SLEEVE

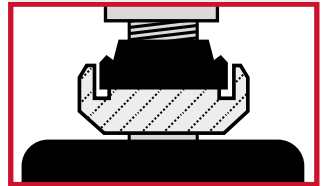

U1-1


USE




DO NOT USE



0.35 | **3**
Nm | in-lbs

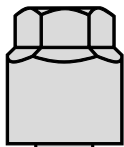

4.0 | **35**
Nm | in-lbs

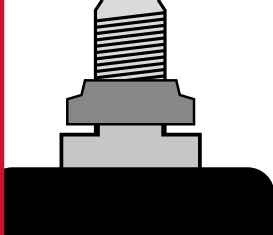

U1-2


DO NOT USE




USE



0.35 | **3**
Nm | in-lbs

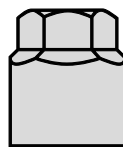

6.0 | **53**
Nm | in-lbs

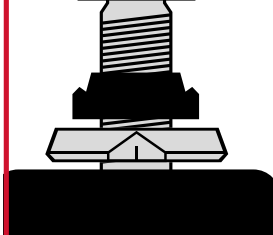


U1-3

DO NOT USE



0.35 | **3**
Nm | in-lbs

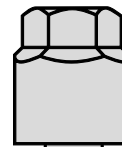

6.0 | **53**
Nm | in-lbs

