





ZN & ZNB Series Parts Breakdown

Toll Free: 1-800-579-8088 Web: www.zinko.com

REV 050216 page 2 of 2

CAUTION

1. **DO NOT OVERFILL OIL BEYOND THE OIL FILL LEVEL, AS THE JACK'S OIL AMOUNT LIMITS THE MAXIMUM EXTENSION OF THE RAM.** Too much oil may make the ram fall off, which may result in a serious accident.
2. **SLOWLY TURN RELEASE STEM.** Turning it quickly makes a heavy load fall rapidly, which may result in jack's losing engagement at jacking point, and/or damage to jack leading to a serious accident.
3. If stains on labels make it difficult to make out the instructions on them, or jack appears to be in an abnormal condition, consult your dealer immediately.
4. Ensure no foreign matter such as dirt enters the system while filling oil. **NEVER USE BRAKE OIL OR VEGETABLE OIL, AS SUCH OIL CAUSES JACK TO MALFUNCTION.**

Parts List

MODEL	ZN-2 (2 Ton)	ZN-3 (3 Ton)	ZN-5 (5 Ton)	ZN-8 (8 Ton)	ZN-12 (12 Ton)	ZNB-12 (12 Ton) LOW	ZN-17 (17 Ton)	ZNB-17 (17 Ton) LOW	ZN-22 (22 Ton)	ZNB-22 (22 Ton) LOW	ZN-35 (35 Ton)	ZN-60 (60 Ton)	
# Parts Description													
1) Body Assy	N/A												
2) Pump Plunger	ZN002-2			ZN008-2				ZN022-2			ZN060-2		
3) Pump Backup Ring	ZN002-3			ZN008-3							ZN060-3		
4) Pump Packing	ZN002-4			ZN008-4							ZN060-4		
5) Pump Plunger Pin	ZN002-5			ZN008-5				ZN022-5		ZN035-5		ZN060-5	
6) Pump Stay Pin	ZN002-6			ZN008-6				ZN022-6					ZN060-6
7) Handle Socket Assy	ZN002-7			ZN008-7				ZN022-7		ZN035-7		ZN060-7	
8) Handle	ZN002-8		ZN005-8	ZN008-8				ZN022-8					ZN060-8
9) Snap Ring/Push Nut	ZN002-9			ZN008-9				ZN022-9					ZN060-9
10) Valve Ball	ZN002-10			ZN008-10									
11) Valve Spring	N/A			ZN008-11									
12) Valve Plug	N/A			ZN008-12									
13) Push Nut	ZN002-13			N/A									
14) Release Packing	ZN002-14												
15) Release Assy	ZN002-15												
16) Ram	ZN002-16	ZN03-16	ZN005-16	ZN008-16	ZN012-16	ZNB12-16	ZN017-16	ZNB17-16	ZN022-16	ZNB22-16	ZN035-16	ZN060-16	
17) Ram Packing Seat	ZN002-17	ZN03-17	ZN005-17	ZN008-17	ZN012-17a		ZN017-17	ZNB17-17	ZN022-17a		ZN035-17	ZN060-17	
18) Ram Backup Ring	ZN002-18	ZN03-18	ZN005-18	ZN008-18	ZN012-18		ZN017-18		ZN022-18		ZN035-18	ZN060-18	
19) Ram Packing	ZN002-19	ZN03-19	ZN005-19	ZN008-19	ZN012-19		ZN017-19		ZN022-19		ZN035-19	ZN060-19	
20) Ram Packing Stopper	ZN002-20	ZN03-20	ZN005-20	ZN008-20	ZN012-20		ZN017-20		ZN022-20		ZN035-20	ZN060-20	
21) Snap Ring	ZN002-21	ZN03-21	ZN005-21	ZN008-21	ZN012-21		ZN017-21		ZN022-21		ZN035-21	ZN060-21	
22) Stuffing Ring	ZN002-22	ZN03-22	ZN005-22	ZN008-22	ZN012-22a		ZN017-22	ZNB17-22	ZN022-22a		ZN035-22	ZN060-22	
23) Cylinder Packing	ZN002-23	ZN03-23	ZN005-23	ZN008-23	ZN012-23		ZN017-23		ZN022-23		ZN035-23	ZN060-23	
24) Stopper Ring	ZN002-24	ZN03-24	ZN005-24	ZN008-24	ZN012-22a		ZN017-22	ZNB17-22	ZN012-22a		ZN035-22	ZN060-24	
25) Adjusting Screw Assy	ZN002-25	ZN03-25	ZN005-25	ZN008-25	ZN012-25	ZNB12-25	ZN017-25	ZNB17-25	N/A	ZNB22-25	N/A		
26) Supporting Plate	N/A												
27) Snap Ring	N/A												
28) Oil Plug	ZN002-28												
29) Horizontal Pin	N/A							ZN017-29		ZN022-29		ZN035-29	ZN060-29
30) Vertical Pin	N/A							ZN017-30		ZN022-30	ZNB22-30	ZN035-30	ZN060-30
31) Ram Spring	N/A							ZN017-31					
32) Ram Spring Stopper	N/A							ZN017-32					
33) Ram Assy	ZN002-33	ZN03-33	ZN005-33	ZN008-33	ZN012-33	ZNB12-33	ZN017-33	ZNB17-33	ZN022-33	ZNB22-33	ZN035-33	ZN060-33	
34) Pin, Handle Socket	ZN002-34			N/A							ZN060-34		
35) Safety Valve Ball	N/A										ZN060-35		
36) Safety Valve Ball Seat	N/A										ZN060-36		
37) Safety Valve Spring	N/A										ZN060-37		
38) Adj. Screw Safety Valve	N/A										ZN060-38		
39) Safety Valve Plug	N/A										ZN060-39		
40) Ring	N/A							ZN012-40		N/A		ZN022-40	